


Quick Guide for DSO-X 2002A Oscilloscope

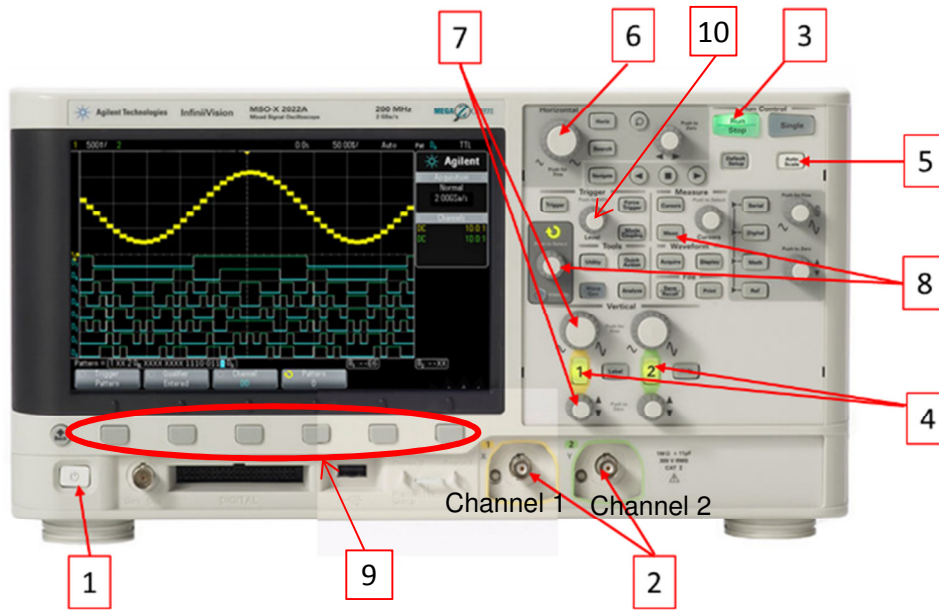

No	Part Description	Function
1	Power ON button	To switch ON the oscilloscope
2	Probe Channel	Connect an oscilloscope probe to an oscilloscope channel BNC connector. Connect the probe's retractable hook tip to the circuit under test.
3	[Run/Stop] button	To run or stop the oscilloscope signal. Green means the oscilloscope is running. Red means the oscilloscope is stopped.
4	Channel Select button	Press 1 to show signal from Channel 1 Press 2 to show signal from Channel 2
5	[Auto Scale] button	To automatically configure the oscilloscope to best display the signals
6	Horizontal adjustment (Time/Div)	To adjust the horizontal scale setting (Time/Div)
7	Vertical adjustment (V/Div)	Turn the larger knob (above button '1') to adjust the vertical scale setting (V/Div). Turn the smaller knob (below button '1') to move the position of the signal up and down.
8	[Meas] button	Press the [Meas] button to display the Measurement Menu, Frequency and Pk-Pk value of the signal. To turn off Measurement Menu, press the [Meas] button again.
9	Option button	There are [Source], [Type], [Add] and [Setting] buttons.
10	[Trigger] knob	To adjust the trigger level